



When you switch on your phone for the first time, press the side key (8) and hold to activate.



- 1 Sound Key Receiver
- 2 Speaker
- 3 Front camera
- 4 Ρυθμίσεις εφαρμογών
- 5 Answer key / Call history
- 6 Voice call key
- 7 Back key, Word processing
- 8 Screen activation key,
End call, Activate/ Deactivate (hold)
- 9 Voice message key
- 10 Activate/ Deactivate MAIC key
- 11 Micro USB slot
- 12 Microphone
- 13 Rear Camera
- 14 Camera Flash
- 15 Speaker
- 16 Camera key
- 17 Flashlight

Phone opening

In order to take out the back cover of your phone, pull the cap upwards, from its niche **a**, as shown in the picture below.



Insert & Remove battery



In order to remove the battery from the device, pull it up by placing your finger in the appropriate notch **b**, as shown in the picture above.

Insert & Remove SIM and SD cards

For Single SIM Users



In order to insert the SIM and SD cards in the device, remove the battery, unlock the corresponding cover, pull it downwards and then place the cards in their slots, as shown in the picture.

In order to remove the SIM and SD cards, follow the same steps.

Insert & Remove SIM and SD cards

For Dual SIM Users



In order to insert the SIM and SD cards in the device, remove the battery, unlock the corresponding cover, pull it downwards and then place the cards in their slots, as shown in the picture.

In order to remove the SIM and SD cards, follow the same steps.



Telephone Assistance



© 2003-2018 MLS.

All rights reserved.

The business names and logos MLS, MAIC and Easy Flip 4G are trademarks owned by MLS Innovation inc, registered in Greece and in other countries.

Android is trademark owned by Google Inc.

With the present, the manufacturer MLS Innovation inc declares that the device is in compliance with all essential demand and other relative clauses of the directive 1999/5/EC.

A copy of the Declaration of Conformity can be found at the MLS website: <http://www.mlsshop.gr/content/diloseis-symmorfosis>

CE 0700

