




## Structure



- |                            |                        |
|----------------------------|------------------------|
| ① Main Camera              | ⑤ Front Camera         |
| ② Activation Key/Lock Key  | ⑥ Micro USB Slot       |
| ③ Volume-shifting keys     | ⑦ Headphone Jack 3.5mm |
| ④ Protective cover SD card | ⑧ Speaker              |

During the first use, press and hold 2 to activate the device. On the Home screen, touch any icon to access the corresponding function.

To return to the home screen, press the home screen key . To return to the previous screen, touch the return key . To display the screen of managing active applications, touch the menu key .

## Import SD Card

---

To remove the card cover, pull it up by placing your fingertip in the right recess **1** as shown below.

Insert the SD card into the corresponding slot **2** as shown below.



## Phone Service



© 2003-2018 MLS.

All Rights Reserved.

The MLS, MAIC, and Life brand and logos are trademarks of MLS Innovation, registered in Greece and other countries.

Android is a trademark of Google, Inc.

Hereby the manufacturer MLS Innovation indicates that the device complies with the essential requirements and other relevant provisions of Directive 1999/5/EK.

A copy of the Declaration of Conformity can be obtained from the web site place of the MLS: <http://www.mlsshop.gr/content/diloseis-symmorfosis>

MLS Innovation Inc. ICT Business Park, 555 35, Thessaloniki, Greece

[www.mls.gr](http://www.mls.gr), [mail@mls.gr](mailto:mail@mls.gr)

